Salt System Quick-Start Guide
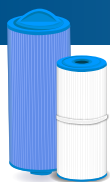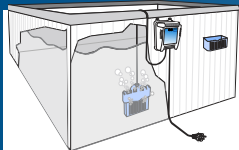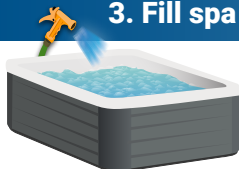
1. Clean Tub & New or Clean Filter(s)

Start with an empty, clean tub and new or clean filter cartridge(s).
(Use Spa System Flush when transitioning from any previous sanitizer system.)

2. Install Salt Cell/Chlorine Generator

Install the Saltron Mini salt cell/chlorine generator per the manufacturer's instructions. The cell should be inspected every 3 months for scaling deposit. If scale exists, the cell should be cleaned with diluted Acid Magic per manufacturer's instructions.

3. Fill spa and circulate water with jets

Fill spa with fresh water. After full, jets must be on to circulate the water while adding chemicals to effectively distribute throughout entire tub.

4. Add Premium Dead Sea Mineral Salts

Slowly add 2 lbs of Premium Dead Sea Minerals per 100 gallons. Disperse over the surface and allow salt to dissolve for at least 20 minutes.

5. Test water

Test water for Alkalinity and pH with Chlorine 4-in-1 Test Strips; adjust if necessary using Alkalinity Increaser or pH Decrease.
Check water with Hardness Test Strips, if under 150 ppm, add Increase Calcium.

Chlorine: 3.0 - 4.0 ppm   **Total Alkalinity (TA):** 80 - 120 ppm   **pH:** 7.2 - 7.6   **Water Hardness:** 150 - 300 ppm

6. Add natural clarifier

Add 1 oz. of natural clarifier per 500 gallons of spa water, weekly.

7. Add Metal Free

Add Metal Free stain/metal preventer per label instructions.

8. Add Dichlor/Stabilizer

Add Dichlor Stabilizing granules to establish a chlorine reserve. At startup, add 2 tablespoons per 500 gallons.

9. Shock water with Oxy-Spa

Add 1 tablespoon non-chlorine MPS Oxy-Spa per 250 gallons of spa water at startup.
After each spa use, add 1 - 2 tablespoons Oxy-Spa.

10. Circulate water for 1 - 2 hours and retest

Allow water to circulate to equilibrate spa chemicals for an hour or two (or overnight) then retest; adjust if necessary.

Salinity: 2,000 - 3,000 ppm

Follow label instructions according to your spa's capacity guidelines.

SpaDepot®
(800) 823-3638 .com
Mon-Fri 6 AM - 5 PM PST